


MIXTEC

MIXTEC

HEAVY DUTY COMMERCIAL JUICER

[Manual Instructions] & [Warranty]

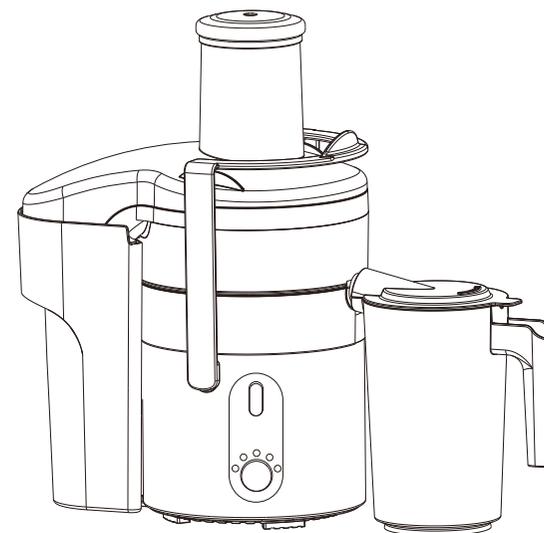

ISO9001-2008




1. Please read the instructions carefully before using your juicer.
2. Take good care of the manual for your future reference.
3. The technical specifications in this manual are subject to change without notice.

CONTENTS

COMPONENTS	1
SPECIFICATION	1
SAFETY NOTES	2
OPERATIONAL INSTRUCTION	5
INSTALLATING INSTRUCTIONS	5
USING INSTRUCTIONS	6
CLEANING AND MAINTENANCE	6
TROUBLE SHOOTING	7
SERVICE AND WARRANTY	8

COMPONENTS

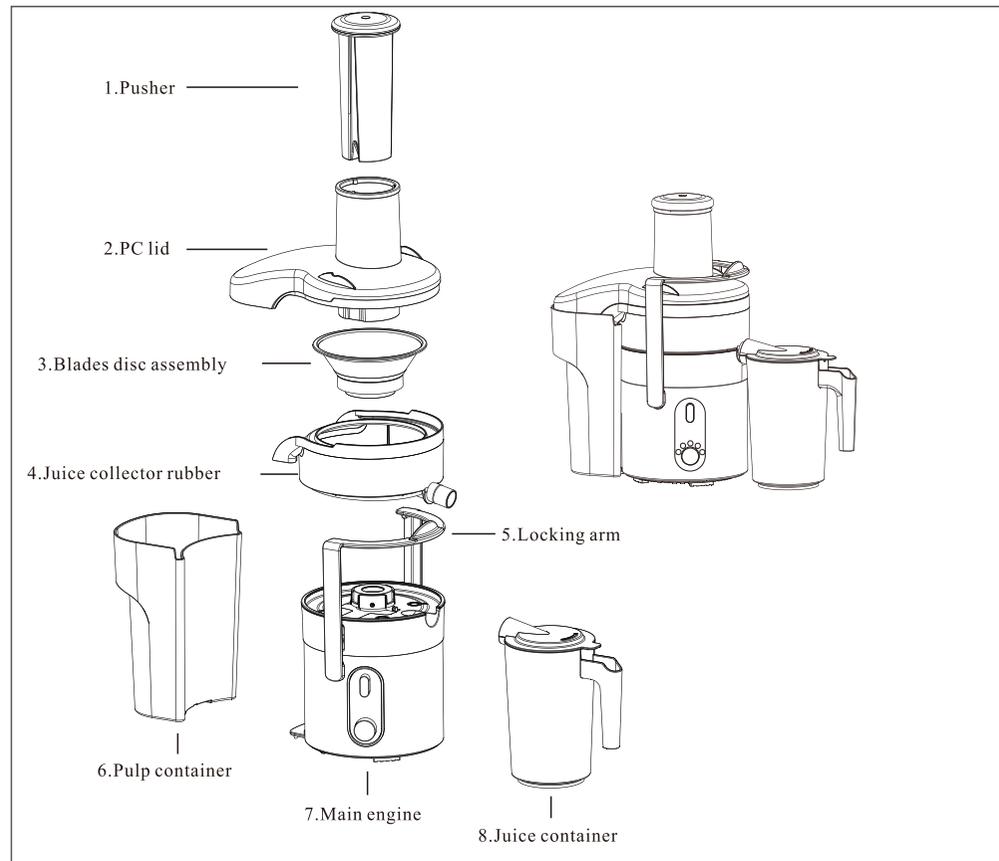

SPECIFICATION

MODEL	VOLTAGE	POWER	SPEED	NET WEIGHT
MS-F820	220V~240V/50Hz,110V~120V/60Hz	1150W	Five speeds	5.2KG - 6.0KG
MS-F825	220V~240V/50Hz,110V~120V/60Hz	1150W	Five speeds	5.2KG - 6.0KG
MS-F828	220V~240V/50Hz,110V~120V/60Hz	1150W	Five speeds	5.2KG - 6.0KG
MS-F830	220V~240V/50Hz,110V~120V/60Hz	1300W	Five speeds	5.2KG - 6.0KG
MS-F835	220V~240V/50Hz,110V~120V/60Hz	1300W	Five speeds	5.2KG - 6.0KG
MS-F836	220V~240V/50Hz,110V~120V/60Hz	1300W	Five speeds	5.2KG - 6.0KG
MS-86J	220V~240V/50Hz,110V~120V/60Hz	1300W	Five speeds	5.2KG - 6.0KG
MS-F850	220V~240V/50Hz,110V~120V/60Hz	1500W	Five speeds	5.2KG - 6.0KG
MS-F855	220V~240V/50Hz,110V~120V/60Hz	1500W	Five speeds	5.2KG - 6.0KG
MS-F859	220V~240V/50Hz,110V~120V/60Hz	1500W	Five speeds	5.2KG - 6.0KG

SAFETY NOTES

Please read and understand the instructions before using the machine to ensure safety and avoid injury and property loss to you and others.

The meaning of signs:



Must (Indication)



Do not (forbidden)




Notes and warnings




Must

The machine can work only when the handle is in locked position.

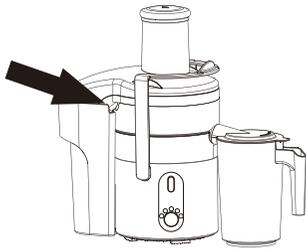


Must

Before open the lid, please make sure the power OFF, and pull down the handle after the filter stopped completely.

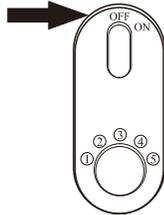

Must

Please use the pusher to press down the ingredients, NEVER insert your fingers or object into the feeding tube for avoiding possible accidents.

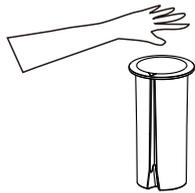

Must

This product is a Category 1 electrical appliance. For your safety, please ensure a good grounding circuit during use.



Do not

NEVER place and use the machine close to gas cooker, coal stove and gas oven or any equipment with fire or high temperature.



Do not

DO NOT use the machine with a broken or cracked filter, and please contact with your local distributor for replacement or maintenance.




SAFETY NOTES




Do not

To avoid dangers, the juicer should not be used by children or infirm people.

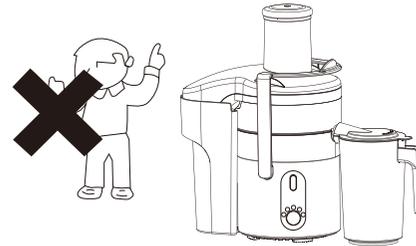


Do not

Please do not put the machine on carpet, table cloth or paper; Otherwise, it may block the air inlet or outlet and then affect the cooling system inside.

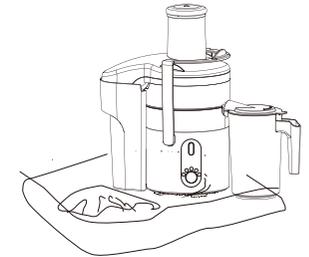


Do not

Do not watch closely from the above of feeding tube when machine is working for avoiding the spillage from hurting your eyes.

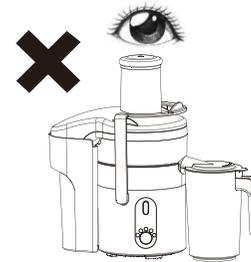


Do not

Do not hold the appliance by the locking handle when you carry it.

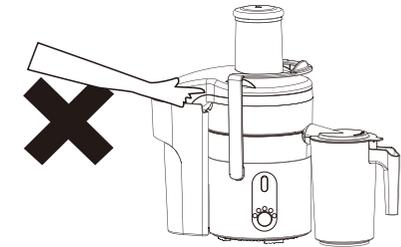


Do not

Do not touch the control panel with sharp tools to avoid cracking or damaging the internal control circuit, which may cause the machine to malfunction.

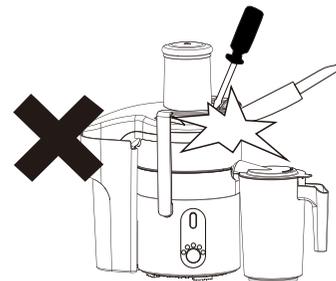

Do not

Don't raise the machine up directly or put the water on it to avoiding danger.

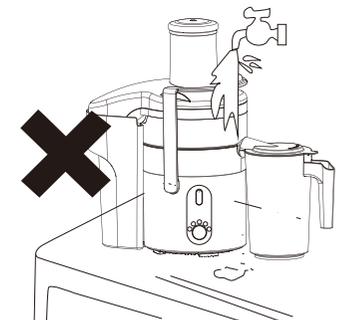


SAFETY NOTES




Notes

Please keep the machine against insects, dust or moisture, and avoid cockroach or other insects to go inside and cause short circuit. We suggest you clean up the machine and pack it well with plastic bag when it is not in use for a long time.

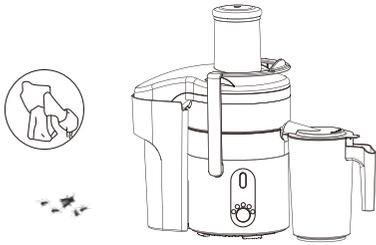


Notes

Please take the plug out of socket when you do not use the machine, to avoid the possible damage of inside electronic elements even fire disaster.

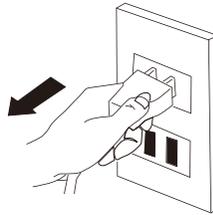

Notes

When using, the juicer should be in a horizontal position, and the side, back and wall should have a distance of more than 20CM. Do not use the juicer in a narrow space. Do not block the air inlet or outlet from foreign objects and affect heat dissipation.

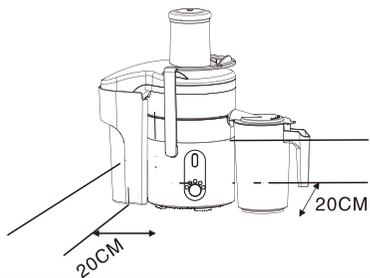


Notes

If the power cord of the machine is damaged, in order to avoid danger, it must be sent to our designated service point or professional for replacement (must be replaced by a dedicated power cord).



Notes

Please turn off the power switch after use and unplug the power.

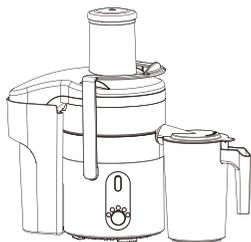

Notes

The machine has a temperature protection device. When the temperature is too high, it will automatically stop. When this condition occurs, please turn off the power and unplug the plug. After the temperature drops, it can be restarted.



OPERATIONAL INSTRUCTION

Power switch: OFF/ON button is the button of START/STOP.

Speed control button: five speed, 1 lowest, 5 highest.

Suitable speed for variety of fruits :


Speed 5: suitable for squeezing apple juice, pineapple juice, carrot juice, cucumber juice and grape juice.

Speed 4: suitable for squeezing Pear juice, lemon juice, tomato juice and Honey melon juice.

Speed 3: suitable for squeezing orange juice.

Speed 2: suitable for squeezing mango juice and watermelon juice.

Speed 1: suitable for squeezing kiwi fruit juice.

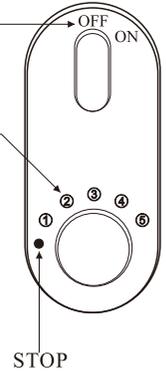


INSTALLING INSTRUCTIONS

Machine assembly / disassembly (please refer to the structure diagram, install sequentially)


Assemble the juice collector:
Set the juice collecting cup to the juice outlet of the main machine for the grooves, flat installation on the main machine.

1

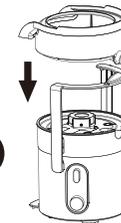

Installation of cutter head filter mesh:
the cutter head filter mesh against the lower coupling of the main engine, want to press a little hard, installed after the hand gently rotating, can be stationary rotation is installed in place.

2

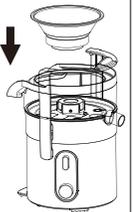


Install the upper base:
Install the upper base on the top of the main engine, and correspond to the slot, until the two parts fully coincide.

3



Safety Switch:
Pull the stainless steel tie rod up and fix it in the groove on both sides of the upper cover, and make sure it is locked completely in the groove, otherwise the machine could not start.

4

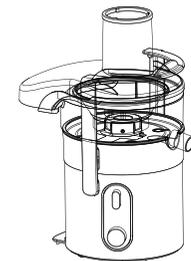

Remove the cutter head filter:
press the cutter head pop-up switch with one hand, the cutter head filter pop-up, the other will take off the cutter head filter.

5



USING INSTRUCTIONS

1. Please keep the manual instruction for further reference.
2. Make sure all detachable parts are assembled well before use.
3. Wash the fresh fruit or vegetables then put into the feeding intake (nutlet, seeds, pericarp or hard-shell vegetables), please peel it before make it, avoiding has the bitter flavor.
4. Place the juice jug well under the spout.
5. Start the power switch to make sure the machine sufficiently working.
6. Put the prepared fruits or vegetables into the feeding intake and thereby push down the rod (don't too fast or high strength), then can make the fresh and delicious juice. (Please drink the fresh juice when it finished extracting, because the nutrition would be losing when put it outside long time. if need the pure juice without foam layer, please put the plate washer into the juice jug to filtering).

CLEANING AND MAINTENANCE

1. Switch off the machine and remove the plug from the socket.
2. Disassemble all detachable parts referring to instructions.
3. Clean all detachable parts. (Note: all detachable parts can be messed in water or rinsed under the tap, but motor unit and machine base parts are excluded)
4. Clean all detachable parts with some non-toxic and noncorrosivewashing-up liquid, Don't use the steel wool to cleaning machine.
5. Rinse the filter under the tap, or wipe out the residue with a soffbrush (Always be gentle and careful to treat the filter for avoiding damage.)
6. Use a slightly damp cloth to wipe the fuselage base.
7. Make sure the machine is clean and dry before you store it.

TROUBLE SHOOTING

Problem	Possible cause	Solution
The light is not bright	No power connection	Insert the plug into the socket that meets the voltage.
	Socket without electricity	Make sure the socket has electricity
	Power line damaged	Replace the power line with the same specification.
	Switch unopened	Switch to "ON"
	Switch damaged	Replace the switch with the same specification
	Microswitch damaged	Replace the Microswitch with the same specification.
	Pull rod is not pressed into place	make sure the pull rod is in place
The light is on, the machine doesn't turn	Motor overheating, temperature-controlled tripping	Wait for a while to restart
	Wiring loose	Tighten the wiring
	Motor damage	Replace the motor with the same specification
	Power board damaged	Replace the prower board with the same specification
Plug in tripping	Electric leakage	Replace the motor with the same specification
	Wiring broken	Replace wiring with the same specification
	Power board damaged	Replace the power board with the same specification
The cutter screen is scraped to the transparent cover	Deformation of the filter mesh of cutter disc	Replace the filter screen with the same specification
	The transparent cover is not in place	Put the transparent cover in place
Speed is out of control	Hall sensor damaged	Replace the hall sensor with the same specification
	Speed controller damage	Replace Speed controller with same specification

If the above problems cannot be effectively solved, please contact the dealer or after-sales service outlets.

SERVICE AND WARRANTY

Thanks for purchasing and using our commercial juicer in accordance with the warranty term.

Should a defect or problem occur due to faulty materials or manufacturing process within the warranty period, please return the machine to your local Distributor for repair. Carriage charge (collection and return) are not covered under the warranty.

Commodity name	
Commodity model	
Date of Purchase	
Place of Purchase	
Distributor stamp	
Customer name	
Customer address	
Customer phone	

Maintenance record

Repair date	Trouble situation	Maintenance station	Maintenance result

1. If maintenance is required, you must return the machine to your local distributor.
2. From the day of purchase, the warranty period is 12 months under the correct use. All rubbers, bearings, blades& jug assemblies are consumable parts and are not covered under the warranty.
3. After sale service will not be provided if non-original parts have been used.
4. During the warranty period, repairs will be charged under the following situations:
 - *Any damage or problem due to improper operation or usage not in accordance with the user manual.
 - *Any damage or problem due to disassembly and repair by alternative parties.
 - *Any damage or problem due to natural disasters.
 - *Liquid damage to the internal components of the unit.